

# DMX CHART




[www.chauvetprofessional.com](http://www.chauvetprofessional.com)

## DMX Values


### 10 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red Shift	000 ⇔ 000 001 ⇔ 255	On Off
4	Strobe	000 ⇔ 010 011 ⇔ 132 133 ⇔ 255	No function Strobe, slow to fast (all pods) Strobe, slow to fast (random strobe macros)
5	White 1	000 ⇔ 255	0–100%
6	White 2	000 ⇔ 255	0–100%
7	White 3	000 ⇔ 255	0–100%
8	White 4	000 ⇔ 255	0–100%
9	Auto Programs	000 ⇔ 010 011 ⇔ 040 041 ⇔ 080 081 ⇔ 120 121 ⇔ 160 161 ⇔ 200 201 ⇔ 240 241 ⇔ 255	No function Auto 1 (slow to fast) Auto 2 (slow to fast) Auto 3 (slow to fast) Auto 4 (slow to fast) Auto 5 (slow to fast) Auto 6 (slow to fast) No function
10	Dimmer Speed Mode*	000 ⇔ 051 052 ⇔ 101 102 ⇔ 152 153 ⇔ 203 204 ⇔ 255	Current dimmer speed mode Dimmer speed mode off (linear dimmer) Dimmer speed mode 1 (fastest) Dimmer speed mode 2 Dimmer speed mode 3 (slowest)

 \*Hold desired dimmer speed value for 3 seconds, then release. This changes the dimmer speed setting in the menu.

### 6 Ch

Channel	Function	Value	Percent/Setting
1	White 1	000 ⇔ 255	0–100%
2	White 2	000 ⇔ 255	0–100%
3	White 3	000 ⇔ 255	0–100%
4	White 4	000 ⇔ 255	0–100%
5	Red Shift	000 ⇔ 000 001 ⇔ 255	On Off
6	Dimmer Speed Mode*	000 ⇔ 051 052 ⇔ 101 102 ⇔ 152 153 ⇔ 203 204 ⇔ 255	Current dimmer speed mode Dimmer speed mode off (linear dimmer) Dimmer speed mode 1 (fastest) Dimmer speed mode 2 Dimmer speed mode 3 (slowest)

 \*Hold desired dimmer speed value for 3 seconds, then release. This changes the dimmer speed setting in the menu.

## 5 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇄ 255	0–100%
2	Red Shift	000 ⇄ 000 001 ⇄ 255	On Off
3	Strobe	000 ⇄ 010 011 ⇄ 132 133 ⇄ 255	No function Strobe, slow to fast (all pods) Strobe, slow to fast (random strobe macros)
4	Auto Programs	000 ⇄ 010 011 ⇄ 040 041 ⇄ 080 081 ⇄ 120 121 ⇄ 160 161 ⇄ 200 201 ⇄ 240 241 ⇄ 255	No function Auto 1 (slow to fast) Auto 2 (slow to fast) Auto 3 (slow to fast) Auto 4 (slow to fast) Auto 5 (slow to fast) Auto 6 (slow to fast) No function
5	Dimmer Speed Mode*	000 ⇄ 051 052 ⇄ 101 102 ⇄ 152 153 ⇄ 203 204 ⇄ 255	Current dimmer speed mode Dimmer speed mode off (linear dimmer) Dimmer speed mode 1 (fastest) Dimmer speed mode 2 Dimmer speed mode 3 (slowest)



**\*Hold desired dimmer speed value for 3 seconds, then release. This changes the dimmer speed setting in the menu.**

## 4 Ch

Channel	Function	Value	Percent/Setting
1	White 1	000 ⇄ 255	0–100%
2	White 2	000 ⇄ 255	0–100%
3	White 3	000 ⇄ 255	0–100%
4	White 4	000 ⇄ 255	0–100%

## 3 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇄ 255	0–100%
2	Red Shift	000 ⇄ 000 001 ⇄ 255	On Off
3	Dimmer Speed Mode*	000 ⇄ 051 052 ⇄ 101 102 ⇄ 152 153 ⇄ 203 204 ⇄ 255	Current dimmer speed mode Dimmer speed mode off (linear dimmer) Dimmer speed mode 1 (fastest) Dimmer speed mode 2 Dimmer speed mode 3 (slowest)



**\*Hold desired dimmer speed value for 3 seconds, then release. This changes the dimmer speed setting in the menu.**

## 1 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇄ 255	0–100%