



PULSE DRIVE SERIES

Pulse Drive Series commands guide.

Guía de comandos de la Serie Pulse Drive.

Version 1.0



Pulse Drive series commands guide.

UDP /IP Port : 8023

SEARCH	01 20 03 00 13 FF FE FF FF FF FF 00 67 00 FF FF FF FF 40
GAIN IP4 40	01 20 03 00 15 FF FE FF FF FF FF 00 64 ch val 00 ip1 ip2 ip3
MUTE IP4 40	01 20 03 00 15 FF FE FF FF FF FF 00 65 ch val 00 ip1 ip2 ip3
INPUT IP4 40	01 20 03 00 15 FF FE FF FF FF FF 00 66 ch val 00 ip1 ip2 ip3

Value(Dec)	Gain(dB)	Step
0	MUTE	
1	-70	5dB
2	-65	
3	-60	
4	-55	
5	-50	
6	-45	
7	-40	
8	-35	
9	-30	
10	-29	1dB
11	-28	
12	-27	
13	-26	

Value(Dec)	Gain(dB)	Step
40	-9.5	0.5dB
41	-9	
42	-8.5	
43	-8	
44	-7.5	
45	-7	
46	-6.5	
47	-6	
48	-5.5	
49	-5	
50	-4.5	
51	-4	
52	-3.5	
53	-3	

14	-25	
15	-24	
16	-23	
17	-22	
18	-21	
19	-20	
20	-19.5	0.5dB
21	-19	
22	-18.5	
23	-18	
24	-17.5	
25	-17	
26	-16.5	
27	-16	
28	-15.5	
29	-15	
30	-14.5	
31	-14	
32	-13.5	
33	-13	
34	-12.5	
35	-12	
36	-11.5	
37	-11	

54	-2.5	
55	-2	
56	-1.5	
57	-1	
58	-0.5	
59	0	
60	0.5	
61	1	
62	1.5	
63	2	
64	2.5	
65	3	
66	3.5	
67	4	
68	4.5	
69	5	
70	5.5	
71	6	
72	6.5	
73	7	
74	7.5	
75	8	
76	8.5	
77	9	

38	-10.5	
39	-10	

78	9.5	
79	10	



EQUIPSON, S.A.

Avda. El Saler, 14 Pol. Ind. L'Alteró

46460- SILLA

Valencia – Spain

www.equipson.es support@equipson.es